
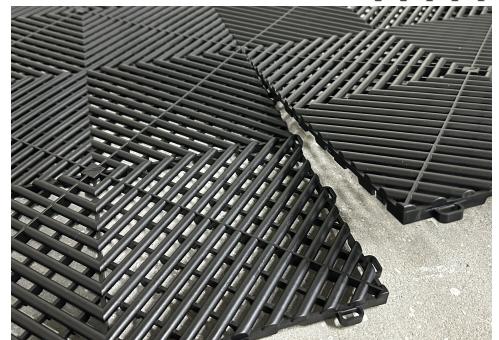


*****WARNING: Do not step on loose tiles, as they can easily shift.*****

Installation instructions for SwissDeck flooring tiles

These installation instructions are intended for small areas. For larger areas, such as a playing field or corridor, we recommend contacting us before you begin installation.

- 1.) Allow the SwissDeck floor tiles to acclimatize for at least 24 hours in the room where they will be installed, at a temperature of approximately 20 °C.
- 2.) Start laying the tiles in the left corner of the room.
- 3.) Maintain an expansion gap of at least 6 to 8 mm between the floor tiles and walls, cabinets, or other heavy objects. Preferably lay the tiles around heavy objects so that the floor can continue to "expand and shrink".
When installing in garages, it is important to avoid direct sunlight, as the floor may expand locally. In that case, we recommend fixing the floor tiles to the subfloor.
- 4.) Place the first tile with the two smooth sides against the walls (top and left side). Place the second tile to the right of the first, with the smooth side against the wall. Place this tile on the tabs of the first tile and press or tap the edge with the palm of your hand or a rubber hammer until the tile clicks into place.
- 5.) Repeat this so that there are 3 rows. Go back to the left side and work 3 rows towards the door opening (below it). Now click the edge trim onto the last tile and close the door; the edge trim must remain clear of the door. (No edging is used on a balcony.) If the space near the door is too large, pull the rows toward the door and cut the tiles at the front to size.
- 6.) Continue laying continuously from left to right and from top to bottom.
- 7.) All SwissDeck products can be cut to size using a hand saw, jigsaw, or circular saw.
- 8.) Ensure that the angle is perpendicular to the front and left side so that it is straight. Install finishing edges and corner pieces if necessary to give it a nice finish.
- 9.) Use the separate loops supplied to attach a finishing edge to the tile on the side where there are no loops.
- 10.) A SwissDeck rubber underlay is recommended to reduce (foot) noise. It is only recommended if it is to be laid in a non-damp environment. If the floor is exposed to moisture or water, do not use an underlay. A rubber underlay is necessary for bitumen subfloors.

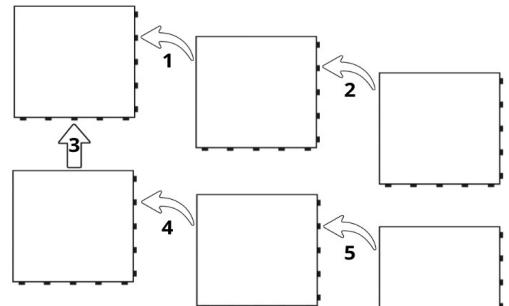

Questions? Call us at +31 (0) 184 60 09 73 or email: info@swissdeck.eu

